EZ SOLAR
making solar simple.

Anaconda™
Installation Instructions

STEP BY STEP INSTRUCTIONS

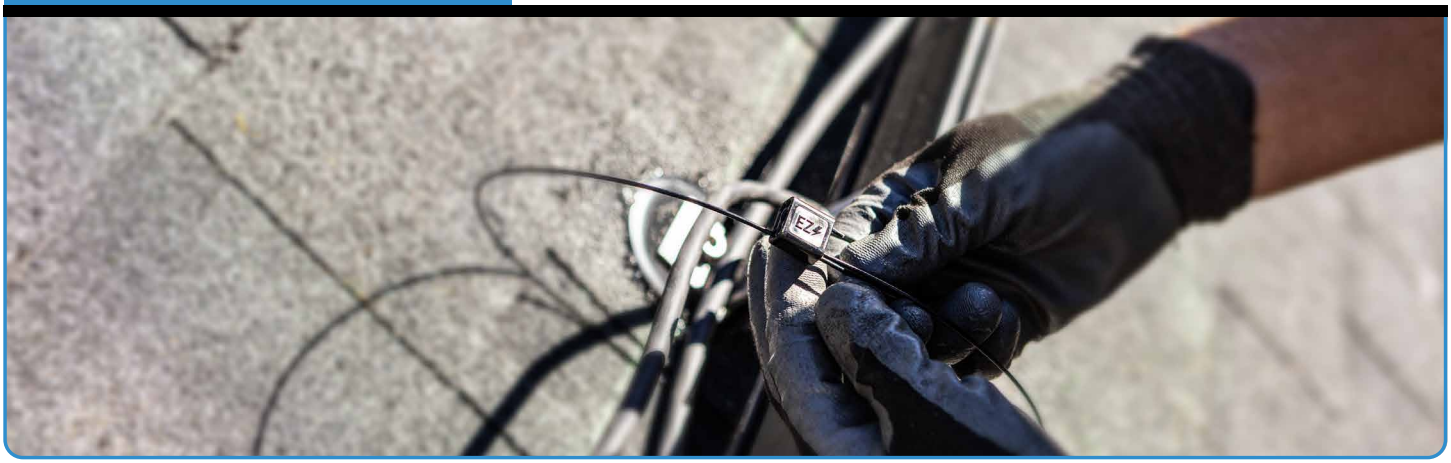

1. Loop cable around components.

2. Insert cable through open hole. Pull tight to temporarily secure cable.

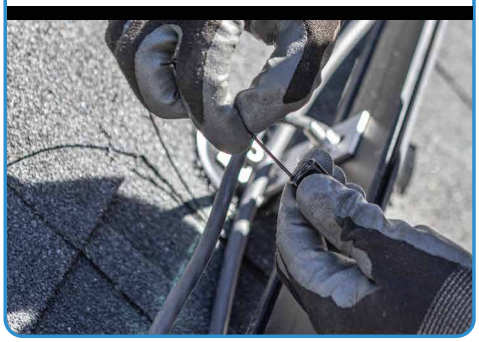

3. Turn cable 180° and insert through final open hole. Pull tight to lock.

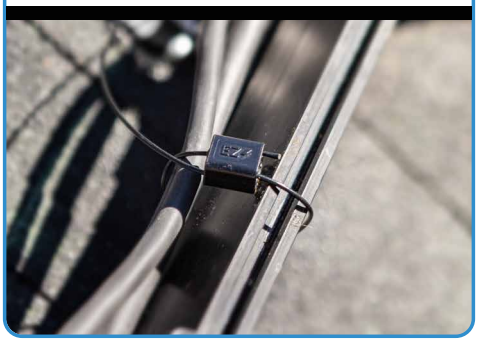
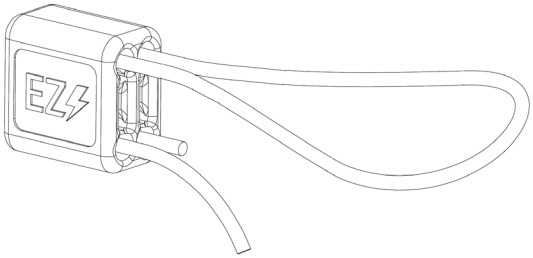
Min/Max Operating Temp: **-35°C/+75°C**
Loop Load Capacity: **40 lbs**
UV Light and Corrosion Resistant Non-Flame Propogating
Transport and store in original package